


- NOT IN TUNE
- IN TUNE
- ROBOHEAD MOVING
- OUT OF SNAP
- CALCULATING
- INTERFERENCE

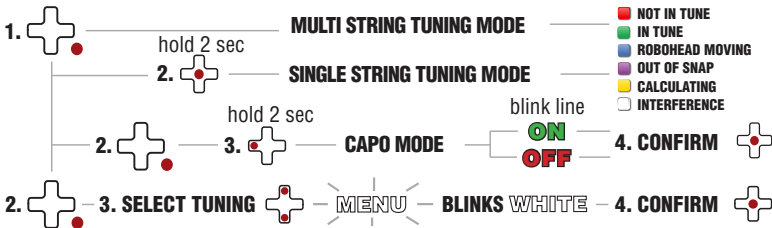

Red Bank



E Standard	E A D G B E
A DADGAD	D A D G A D
D Whole Step	D G C F A D
G Drop D	D A D G B E
B E Flat	E^b A^b D^b G^b B^b E^b
e Dbl Drop D	D A D G B D

Green Bank

E Open E	E B E G^b B E
A Open A	E A E A C^b E
D Open D	D A D F^b A D
G Open G	D G D G B D
B Dobro	G B D G B D
e All 4ths	E A D G C F

Blue Bank

E _____
A _____
D _____
G _____
B _____
e _____

White Bank



E C-Tuning	C F A[#] D[#] G C
A Low C	C G D G A D
D C [#] Tuning	C[#] F[#] B E G[#] C[#]
G B Tuning	B E A D F[#] B
B Drop C	C G C F A D
e Drop B	B F[#] B E G[#] C[#]

Yellow Bank


E Open C	C G C G C E
A Open C6	C A C G C E
D Open B	B F[#] B F[#] B D[#]
G Dbl Drop C	C G C F A C
B Dbl Drop C [#]	C[#] G[#] C[#] F[#] A[#] C[#]
e Dbl Drop B	B F[#] B E G[#] B

Magenta Bank

E _____
A _____
D _____
G _____
B _____
e _____

ENTER FUNCTION MENU

PRESS „ON“ BUTTON 3 X

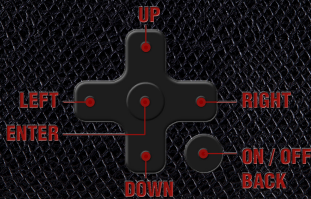


4. SELECT FUNCTION  **MENU**  **BLINKS RED**

5. CONFIRM 

E = Utilities A = Tweaks D = Tweaks G = Pitch B = Custom e = Resets

 Utilities

- 
- E String Up/Down
 - A Custom Tuning Mode
 - D Reference Tuning
 - G Firmware Version
 - B Battery Level
 - e Global Tuning Offset


 Tweaks

- E Calibration Mode
- A Accuracy Level
- D Robohead Delay
- G Robohead Speed
- B Interference Level

 Tweaks

- E Gain
- A Guitar Type
- D Pitch Window
- G Low Tunings
- B Tuning Offset

 Pitch/String

- 
- E Pitch Correction
 - A Pitch Correction
 - D Pitch Correction
 - G Pitch Correction
 - B Pitch Correction
 - e Pitch Correction

 Custom Tune

- E Red Bank Activation
- A Green Bank Activation
- D Blue Bank Activation
- G White Bank Activation
- B Yellow Bank Activation
- e Magenta Bank Activation

 Resets

- E Reset Red Bank
- A Reset Green Bank
- D Reset Blue Bank
- G Reset White Bank
- B Reset Yellow Bank
- e Reset Magenta Bank
- E Factory Reset

